

NYCCTfab

LASER CUTTING

Material Data Files

Operators should load the according laser setting for a certain material from the path shown below:

**Desktop>Laser template>Laser settings
>xxx (xxx will be the material type)**

**** If there is no such laser setting for the material, please consult with laser operator coordinator before running the laser cut.**

**** If the laser cutter encounters a situation that the material does not cut through, using the normal laser setting for the material. Please proceed to the trouble shooting folder next to the laser cutter. If the situation continues to happen, please consult with the laser operator coordinator.**